

KFZ 107 - Steering Wheel Claw with LED


0004-0107

- universal anti-theft device made of hardened steel with plastic cover
- with LED flashing light
- to protect cars, trucks, SUVs, caravans, etc.
- including 2 keys




BASI GmbH

Konstantinstraße 387
41238 Mönchengladbach
Germany | www.basi.eu

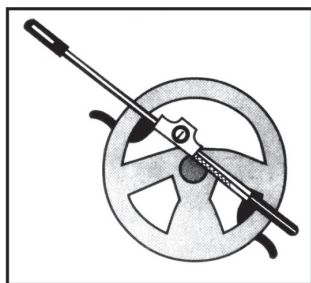

How to Close

1. Hold the lock in your right hand and carefully place the first hook in one of the gaps on the inside of the steering wheel.
2. Pull the lock apart with your left hand so that the hook on the other side surrounds the steering wheel. For increased safety, place the hook in the small gaps of the steering wheel.

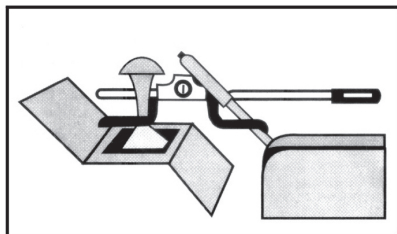

How to Open

1. Open the lock by turning the key clockwise in the lock.
2. Press the hooks back together and remove the lock from the steering wheel

Attention: To avoid injury, do not attempt to start or drive the car while the steering lock is still installed. Do not stow the steering wheel lock where it might disturb you while driving, such as in the driver's footwell, on the gear lever or handbrake.

BASI GmbH

Konstantinstraße 387
41238 Mönchengladbach
Germany | www.basi.eu

Alles in Sicherheit

